

## Fixing details






Model	Lockcase
· Pnf1 · Pn1 · P1	<b>A2</b>

**R** For lockcase  
Right version

**AR** For digital furniture locks  
Right version

Installation of digital furniture locks & lockcase

Fixing hole size

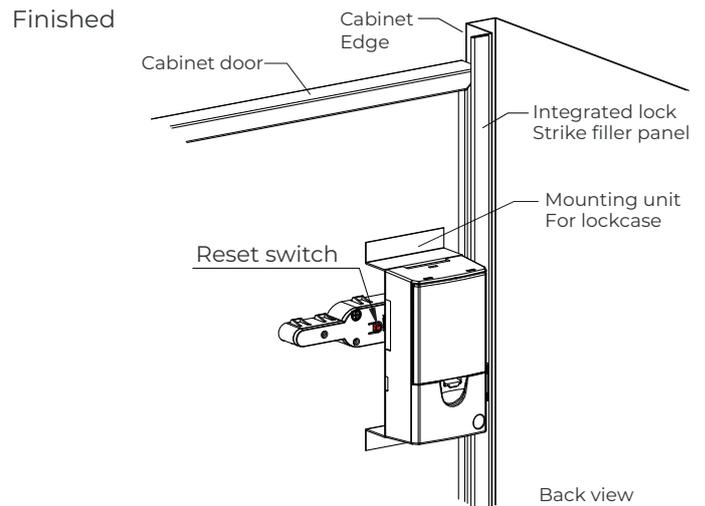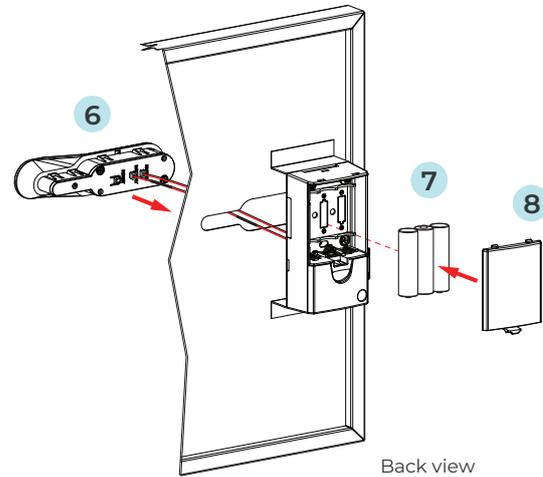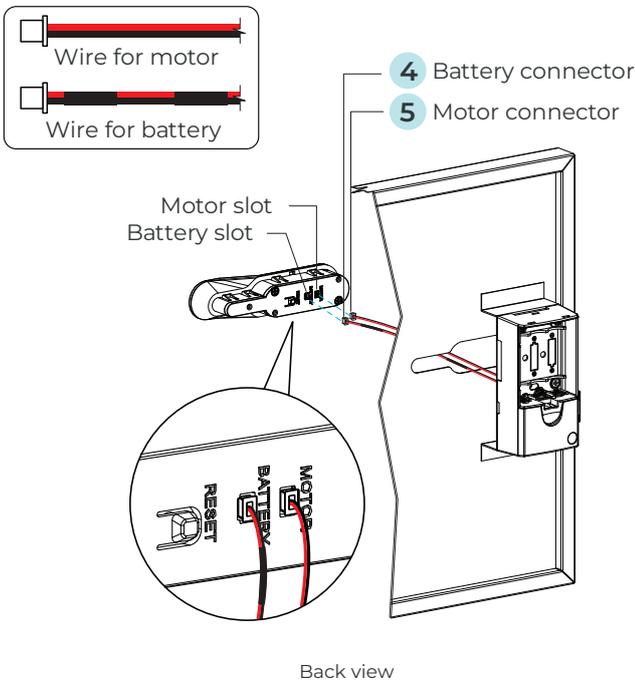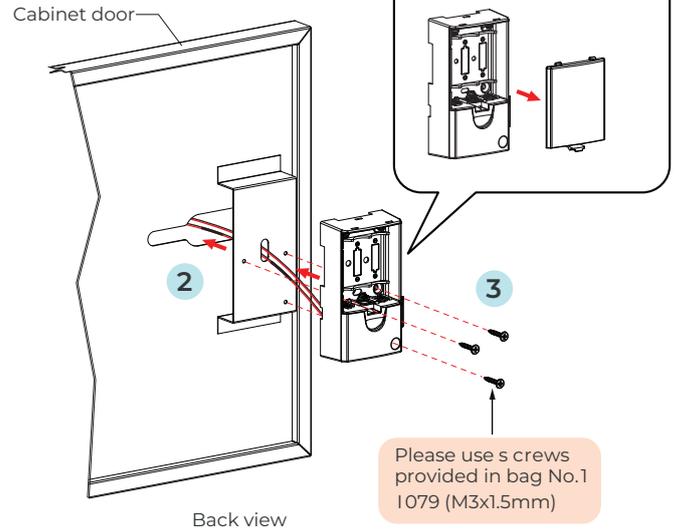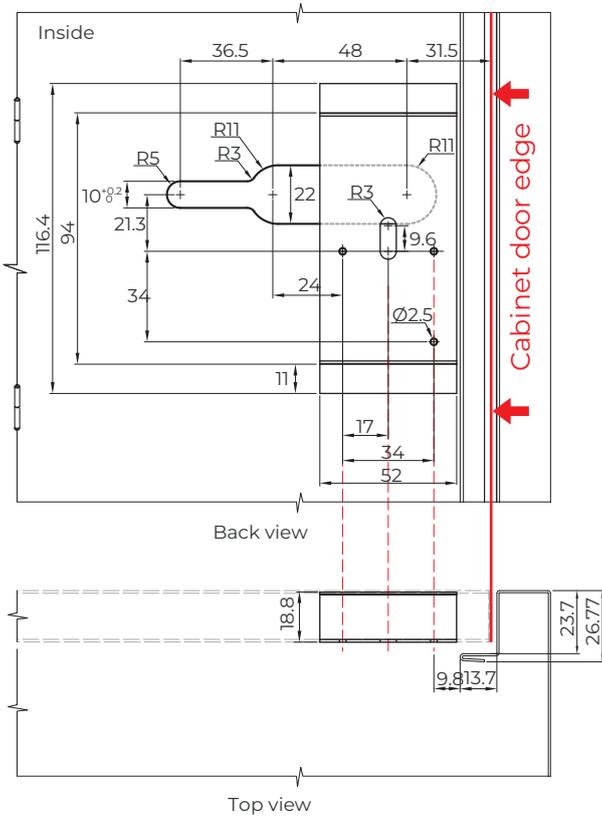


### ⚠ Cautions

1. Fasten the screws only in the specified positions. Use the correct screws size as labeled on the packaging.
2. The holes for installing of the lock must be drilled to the specified size and identical on both sides.
3. Do not modify any equipment, as this will immediately void the warranty.
4. Be careful of breakage during installation.


# Password setting

## Factory Reset

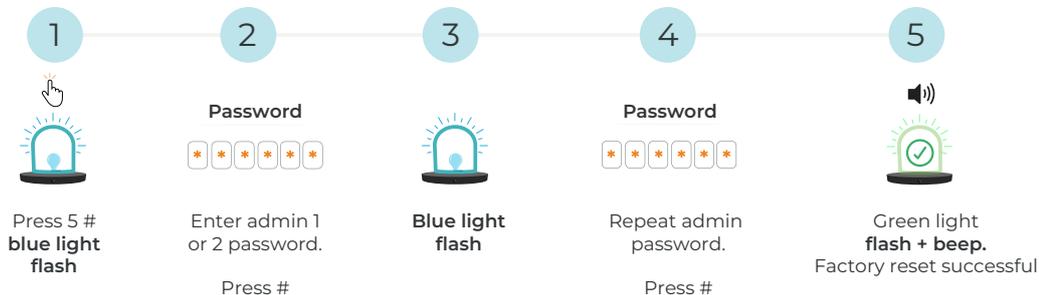


## Add Admin 1 - Password

\*Admin password should be registered as the first step

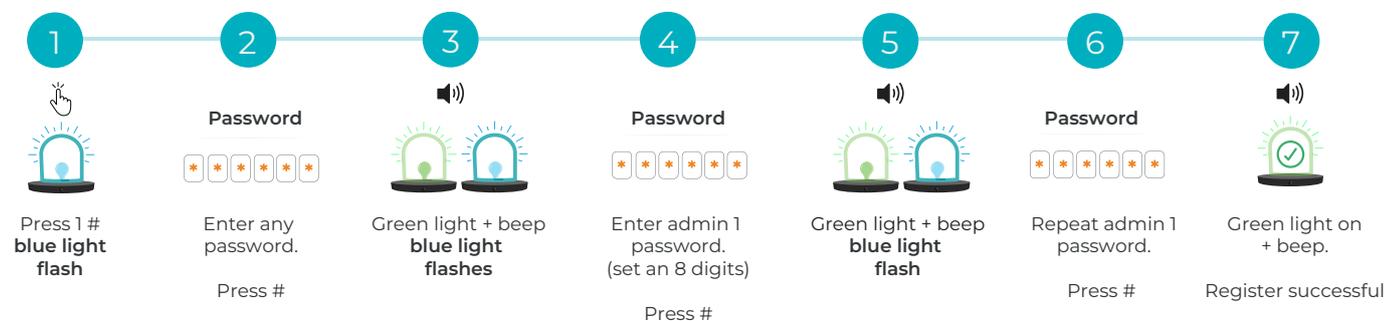


\*Admin must set an 8 digits password and admin must be added as the first and second individuals in the sequence.

## Add Admin 2 - Password

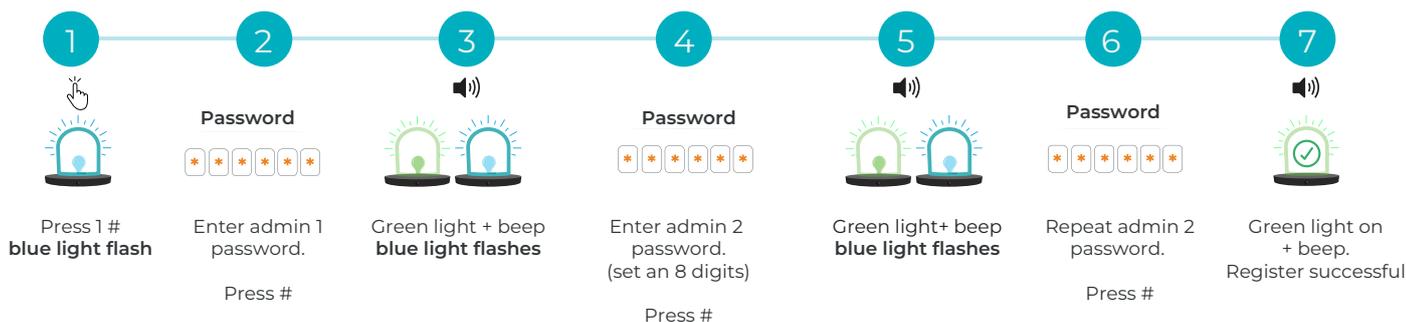


## Add Users - Password

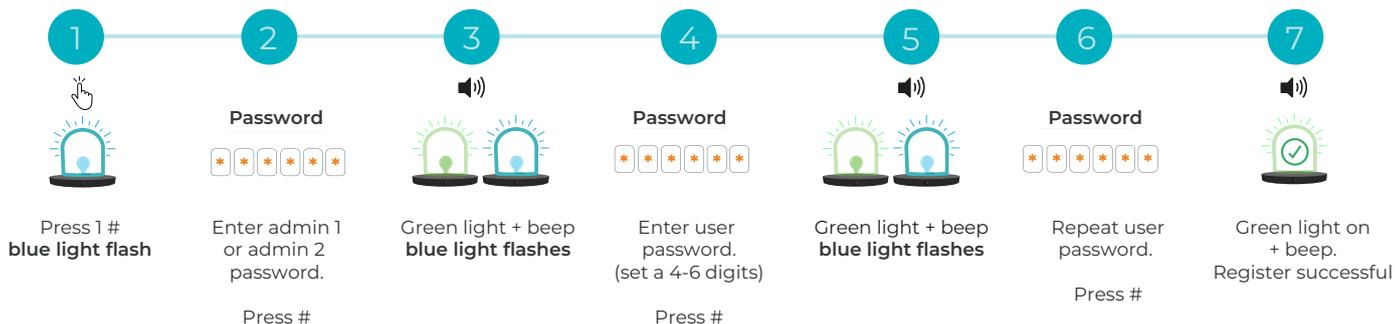

\*Users can set a 4-6 digit password

## Change password for Admin and User \*Admin must set an 8 digits password.

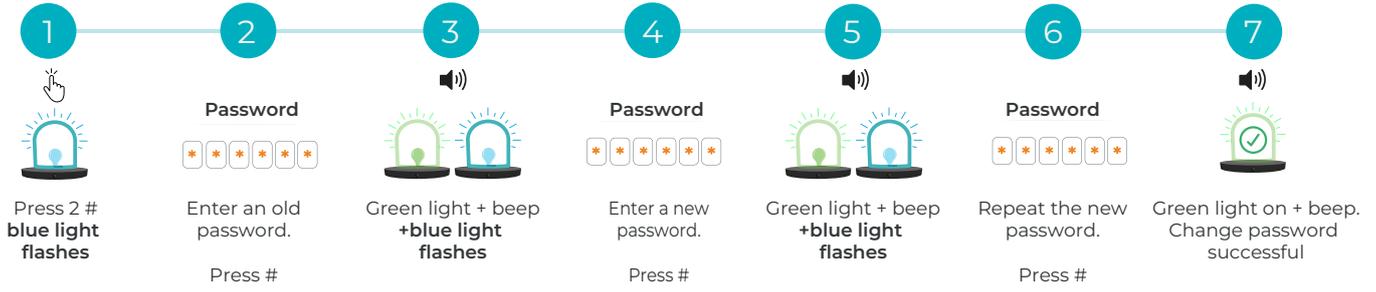

## Delete all users - password (By admin only)




## Unlock

Password  
\* \* \* \* \*  
Enter password



Entering wrong password system		
Times	Wait	Warning
1st and 2nd	-	red light flashes 3 times along with long beep
3rd	15 seconds	
4th	20 seconds	
5th	30 seconds	

## Silent Mode ( On / Off )

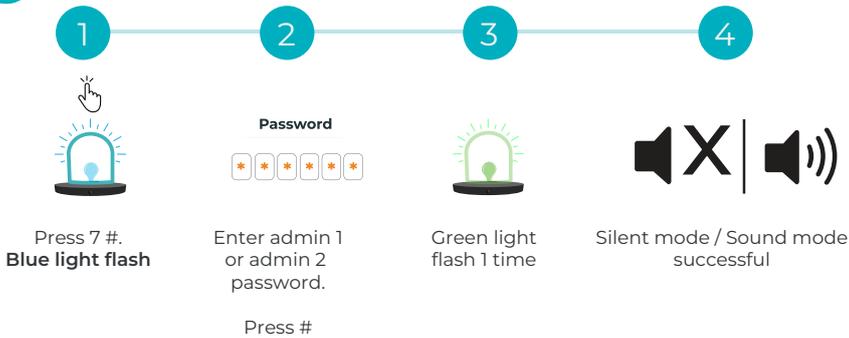

# Password setting

## Private/Public ( On / Off )



Press 9#  
**blue light flash**

**Password**  
\* \* \* \* \*

Enter admin  
1 or 2  
password.

Press #



**Green light  
flash + beep**



The lock is operating in  
private/public mode

\*In public mode, the lock case latch will remain in the open position  
\*\*When returning to private mode, the latch will automatically lock, and all stored user data will be erased.

## Add User



The lock is in  
the unlocked state  
(lock case latch  
open position)

**Password**  
\* \* \* \* \*

Enter a 4-6  
digits password  
once.  
Press #



**Blue light stay on  
+ beep 2 times**



The lock is in  
the locked state.

Registration is complete.

## Unlock



**Password**  
\* \* \* \* \*

Enter the  
registered  
4-6 digits  
password.

Press #



The lock will  
unlock.  
Green light on

**Password**  
\* \* \* \* \*

Password  
will be reset

In public mode, the password is reset every time the lock is opened.  
If the password is forgotten, the admin can open the lock.

## Battery



When the battery voltage drops below 3.6 V, it will emit a beep sound 5 times and the orange light will flash rapidly for 5 seconds to alert you to recharge the battery.



When the voltage is less than 3.0 V, the key will not be unlocked, and the red light will flash rapidly for 5 seconds.



If there is an error in any step, the red light will flash twice, and alert by a beep sound.



During battery charging, the LED will show orange, green, red light every 10 minutes. When the battery is fully charged, it will display a green light for 5 seconds.



Recommend waking up the screen before starting every step.  
Register the administrator password as the first step.

## Safety Guide and Precautions

1. Please do not place the battery near the fire to prevent an explosion.
2. Do not tamper with the product to avoid damage.
3. Do not scratch the product with sharp objects as it may cause permanent damage.
4. Do not leave the product in areas where it can get wet or splashed with water.
5. Do not connect the device to household wiring.
6. If cleaning is needed, wipe with a soft cloth.
7. Do not remove the battery during the setup process.

After receiving a low battery warning, please replace the battery immediately.